
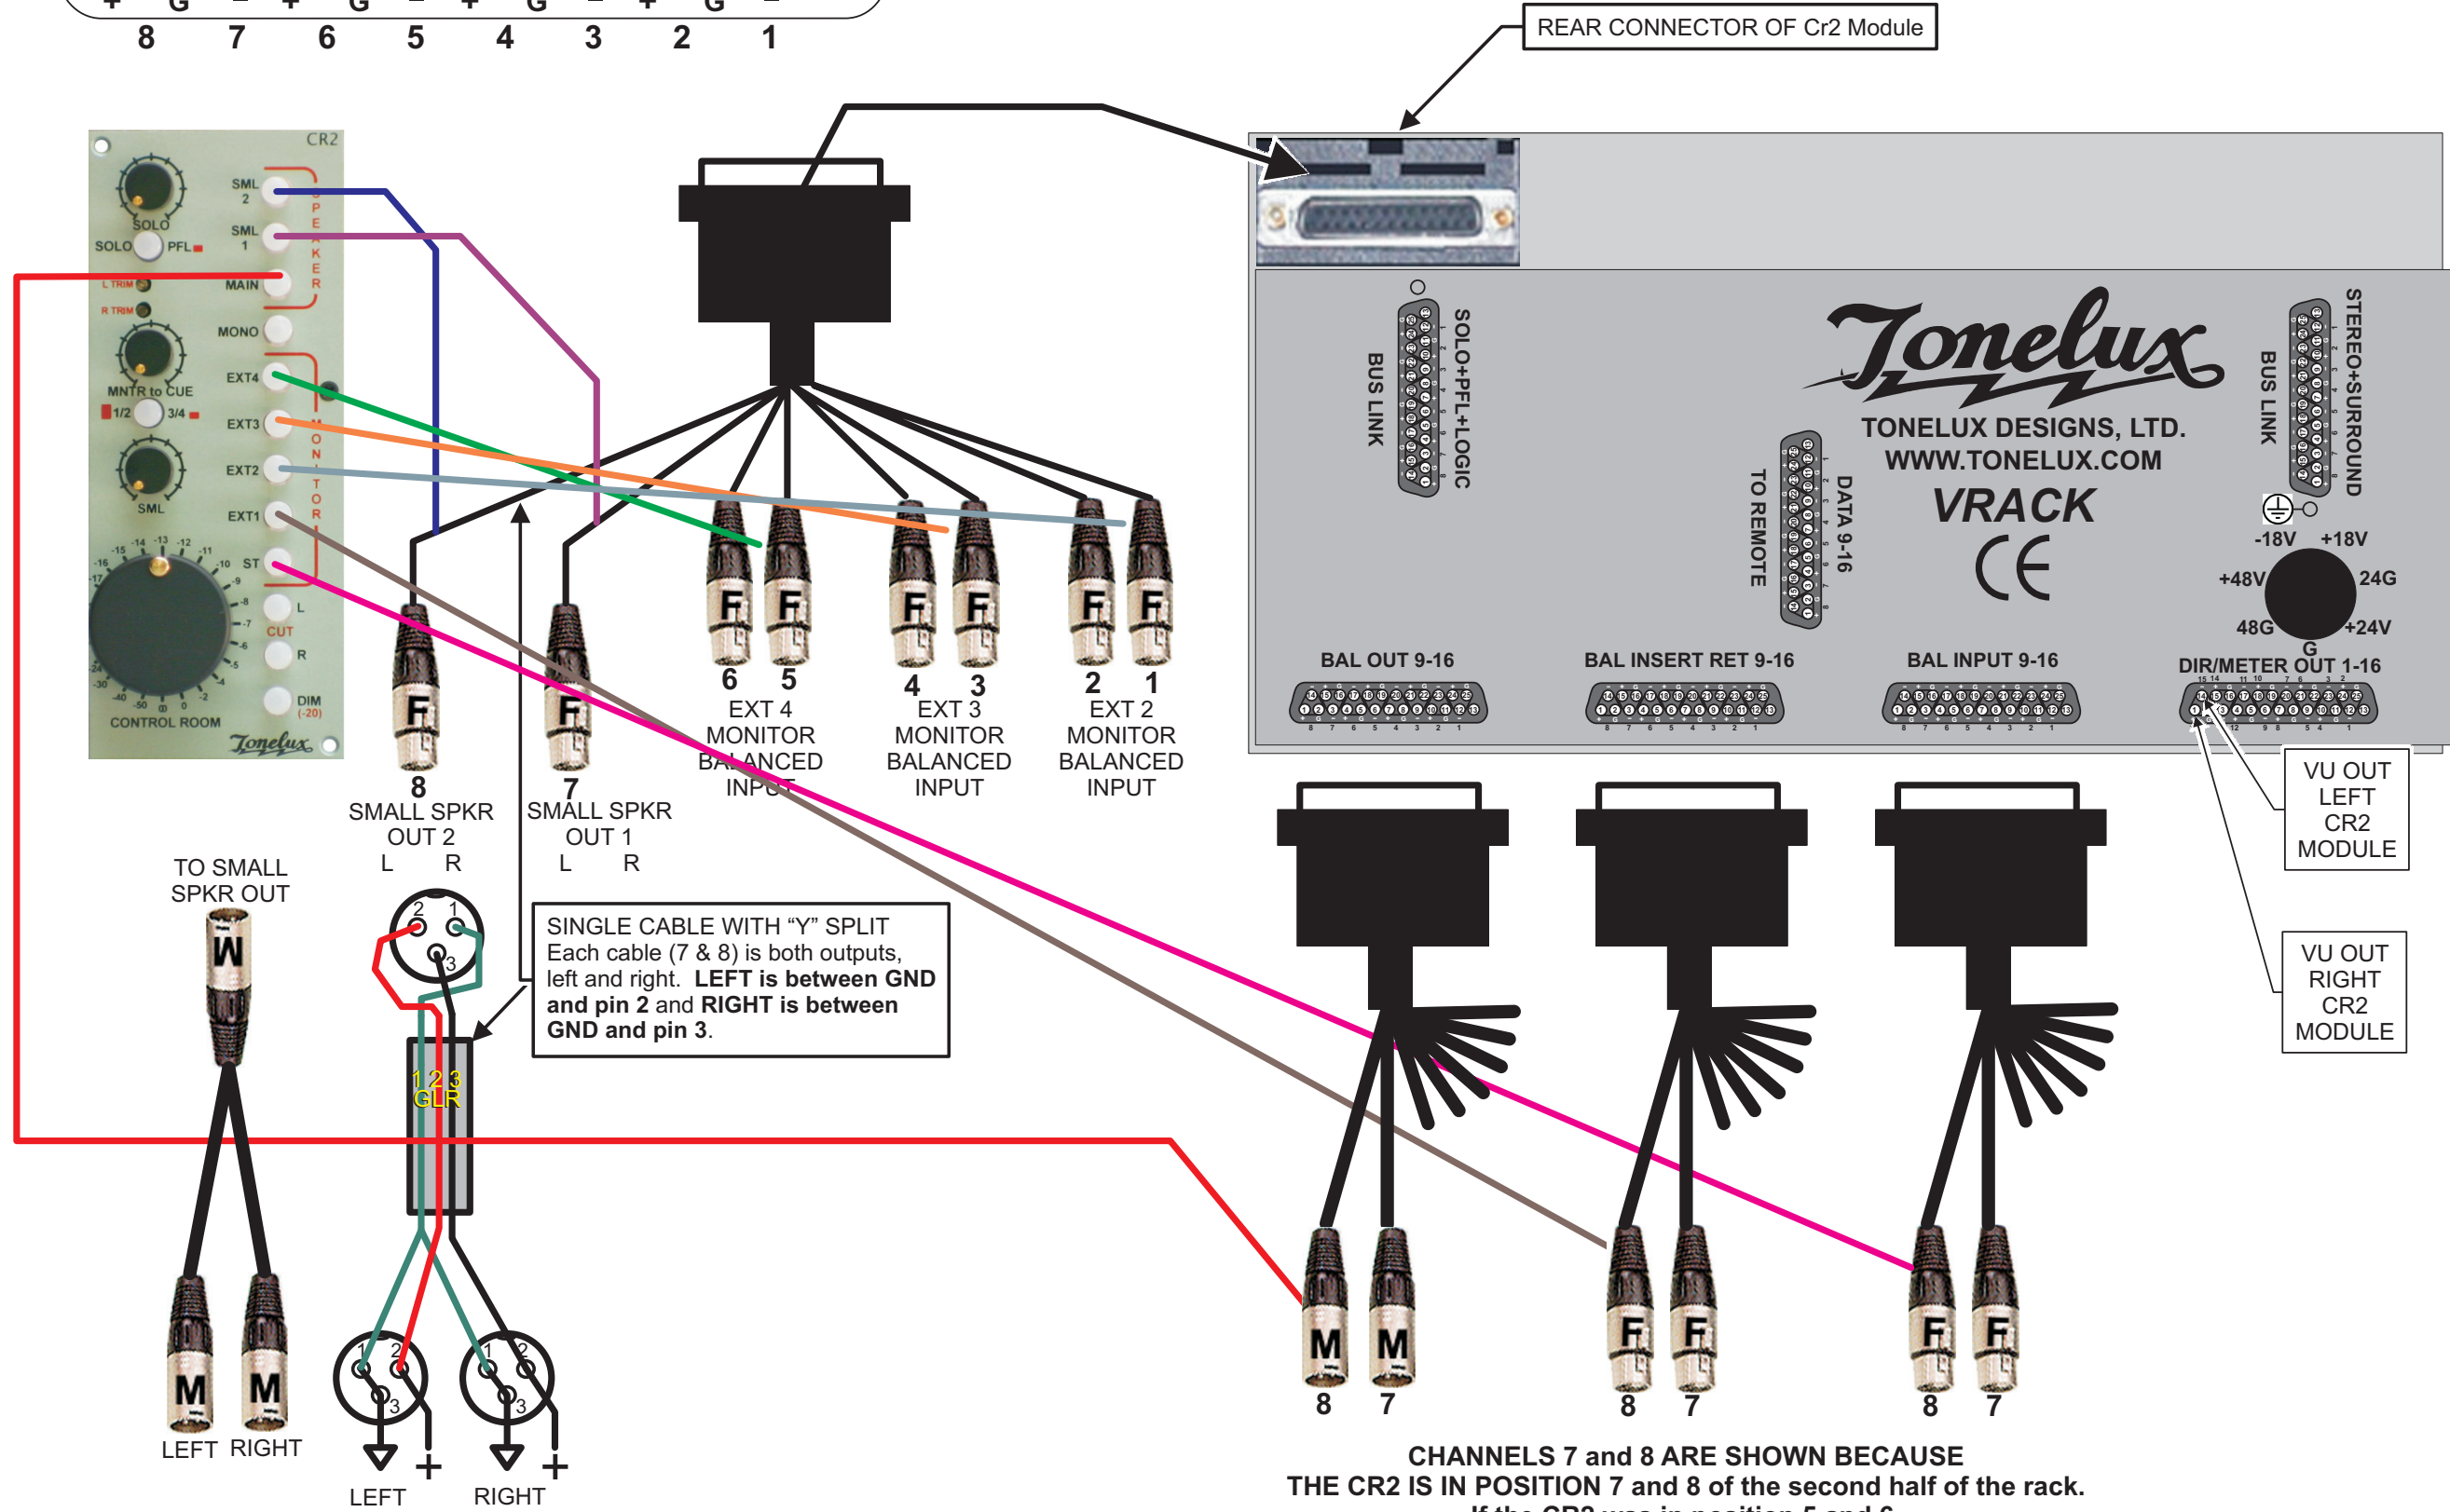


VRACK CONTROL ROOM (CR2) hook-up diagram PAGE 3

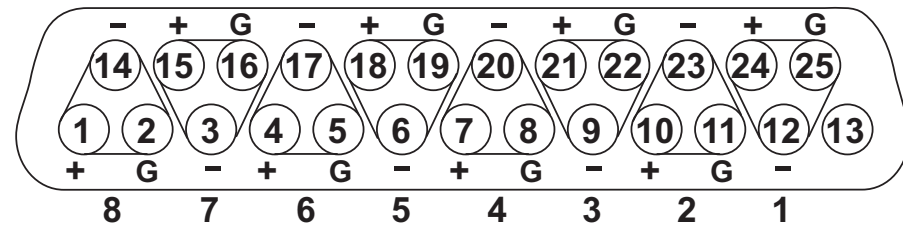

SINGLE CABLE WITH "Y" SPLIT
Each cable (7 & 8) is both outputs,
left and right. **LEFT** is between
GND and pin 2 and **RIGHT** is between
GND and pin 3.

CHANNELS 7 and 8 ARE SHOWN BECAUSE
THE CR2 IS IN POSITION 7 and 8 of the second half of the rack.
If the CR2 was in position 5 and 6,
then all of these connectors would be 5 and 6
If the CR2 was in 3 and 4, then they would be 3 and 4, etc.