


Tonelux

FX2 and FX2+ OPERATION GUIDE

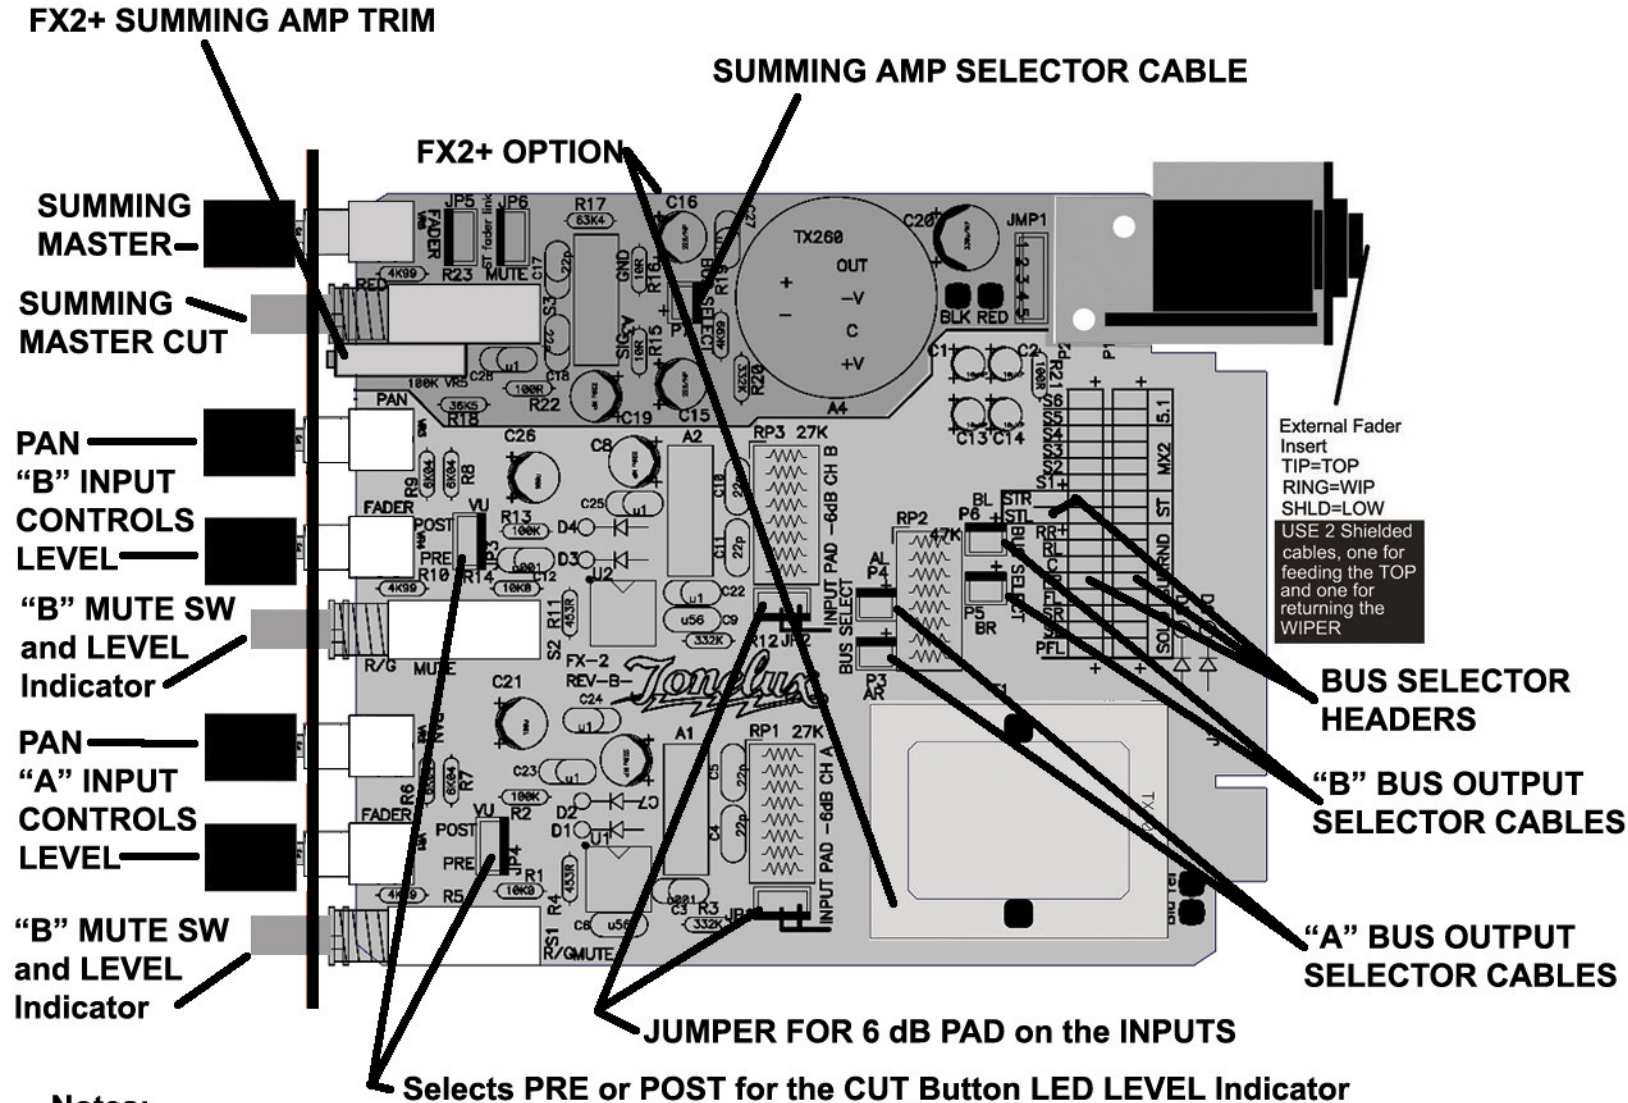

Notes:

- 1 The FX2+ option includes a summing amp that can be used for any of the sends as a master or the STEREO bus as a master as well as any other bus. The FX2+ can also be used as an emergency replacement for the SM2, SM1, etc.
- 2 The lower input marked "A" is accessed through the VRACK d-sub marked "INPUT"
- 3 The upper input marked "B" is accessed through the VRACK d-sub marked "INSERT RETURN"
- 4 The Summing amp is assigned with the single jumper wire from the upper part of the card and plugs into one of the bus selections near the edge connector. RED+/WHITE-, or WHITE+/BLACK-
- 5 The FX2+ option has the summing amp output going to the VRACK d-sub marked "OUTPUT"
- 6 Insert a MONO Fader into the 1/4" jack marked "External Fader Input" for control of the FX2+ summing output.
- 7 The 4 jumper wires assign the 2 inputs, "A" and "B" to any bus. RED+/WHITE-, or WHITE+/BLACK-